

## kit# 1008270

Cat-back 2-1/4" kit with turbo muffler

**Application:** '82-'85 CJ8, '82-'83 CJ 4 cyl.

Kit Includes:

- |                         |  |
|-------------------------|--|
| 1) 2-1/2" clamp         | 1) 2" id/2-1/2" od adapter                         |
| 2) 2-1/4" clamps        | 1) turbo muffler 2-1/2" center/2-1/4" offset #949S |
| 1) 2" clamp             | 1) tail pipe # 330203                              |
| 1) BR129 hanger bracket |  |

**DANGER WARNING:** Should the purchaser decide to install this exhaust product at home, be warned that pleasure car or light duty truck/van "bumper" jacks are intended for emergency use only. The use of frame contact jack stands in conjunction with a floor jack as main support is highly recommended to minimize accidental dropping of a vehicle while the installation proceeds. We recommend the use of a shop hoist if possible. Please use caution!!


Limitation of liability--Disclaimers: The regulation of emissions production, noise levels and safety standards is undertaken by the federal government, each of the fifty state legislatures, and by many local municipalities, towns and counties.

The manufacturer makes no warranties of merchantability, of fitness for a particular purpose, or that its products are approved for general use, or that its products comply with laws, regulations or ordinances in the states where they may be sold to the ultimate purchaser, the consumer.

The entire risk as to the conformity of this product in any such state and as to repair, should the product prove to be defective or non-conforming, is on the retail purchaser, the buyer, the ultimate consumer of such product and it is not upon the seller, distributor, or manufacturer.

In this connection, retail purchaser, the buyer, the ultimate consumer assumes the burden of the entire cost of any and all necessary service, alterations, and or repair.

The foregoing statement limits the liability of the manufacturer.

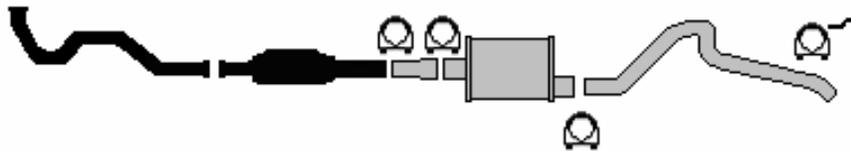

Instructions:

**NOTE: DO NOT TIGHTEN CLAMPS UNTIL THE LAST STEP!!**

- 1) Support the vehicle in a safe way, using either a shop hoist or frame contact stands. Remove the exhaust after the converter (the muffler and tail pipe), leaving the o.e. rubber hanger mounts in place.
- 2) For those with CJ8 6 cyl., install the 2" id end of the adapter to the o.e. pipe after the converter using a 2" clamp.
- 3) Install the inlet of the muffler (center in, 2-1/2") to the adapter (or o.e. pipe) using a 2-1/2" clamp.
- 4) Install the tail pipe to the muffler using a 2-1/4" clamp.
- 5) Install the BR129 hanger bracket to the o.e. hanger above the tail pipe after the rear axle. Use the other 2-1/4" clamp to connect the tail pipe to the hanger bracket
- 6) Check for clearance of the frame and body, and of all brake and fuel lines. Position the tail pipe so as to maximize clearance. When you are satisfied with how the system hangs, tighten all bolts and clamps.



Heartthrob exhaust systems are manufactured by Heartthrob Exhaust--Litchfield, MN

Email us at [mike@heartthrobexhaust.com](mailto:mike@heartthrobexhaust.com) with any questions. [www.heartthrobexhaust.com](http://www.heartthrobexhaust.com)

320-693-02

**BUILD SHEET FOR: 2-1/4" CAT-BACK**

**PART # 1008270**

- \_\_\_\_\_ 1) 2" id/2-1/2" od adapter
- \_\_\_\_\_ 1) turbo muffler 2-1/2" center/2-1/4" offset #949S
- \_\_\_\_\_ 1) tail pipe # 330203
- \_\_\_\_\_ 1) HARDWARE KIT

INSPECTED BY: \_\_\_\_\_

DATE: \_\_\_\_\_

INSPECTED BY: \_\_\_\_\_

DATE: \_\_\_\_\_

**BUILD SHEET FOR: 2-1/4" CAT-BACK**

**PART # 1008270**

- \_\_\_\_\_ 1) 2" id/2-1/2" od adapter
- \_\_\_\_\_ 1) turbo muffler 2-1/2" center/2-1/4" offset #949S
- \_\_\_\_\_ 1) tail pipe # 330203
- \_\_\_\_\_ 1) HARDWARE KIT

INSPECTED BY: \_\_\_\_\_

DATE: \_\_\_\_\_

INSPECTED BY: \_\_\_\_\_

DATE: \_\_\_\_\_

**BUILD SHEET FOR: 2-1/4" CAT-BACK**

**PART # 1008270**

- \_\_\_\_\_ 1) 2" id/2-1/2" od adapter
- \_\_\_\_\_ 1) turbo muffler 2-1/2" center/2-1/4" offset #949S
- \_\_\_\_\_ 1) tail pipe # 330203
- \_\_\_\_\_ 1) HARDWARE KIT

INSPECTED BY: \_\_\_\_\_

DATE: \_\_\_\_\_

INSPECTED BY: \_\_\_\_\_

DATE: \_\_\_\_\_